

Step  
8

Unwrap the slats & lay them in your frame with the joining cleats on the slats facing down. The slats should be sitting on the side rail cleats.



# DAYBED ASSEMBLY INSTRUCTIONS



ONE FRAME  
MANY USES



Coastwood  
FURNITURE



Making it EASY through superior customer service

## BEFORE YOU START:

### Please check you have all components -

- 2 Bed ends
- 2 Side rails
- 2 Back rails, one curved
- 2 Slat gates
- 4 25mm Pozi drive screws
- 8 60mm J.C. Bolts + Allen Key

Step  
**1**

Take one end and stand it upright against something solid



Step  
**2**

Take one side rail and attach to head end as shown in figure 2.

*\*Please make sure that top of rail is facing up as shown in figure 3*

*\*Please note cleat at inside of side rail and slat spacer at top.*



Step  
**3**


Move the other end into position and attach side rail as per head end

Step  
**4**

Now attach the other side rail following instructions in step 2 & 3.


Step  
**5**

Use the J.C. Bolts to hold the two rails in place (Figure 6) The straight rail goes first, then the curved rail goes on the top with the curve facing upwards. Tighten all J.C. Bolts with Allen Key. (Figure 7)

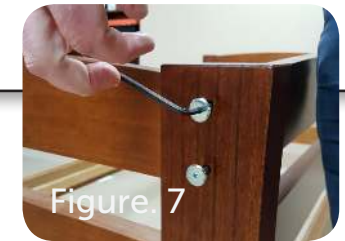

Step  
**6**

Make sure the lugs on the side rail brackets are sitting right down to the bottom of the slots in the bracket on head and foot ends. (Figure 4)

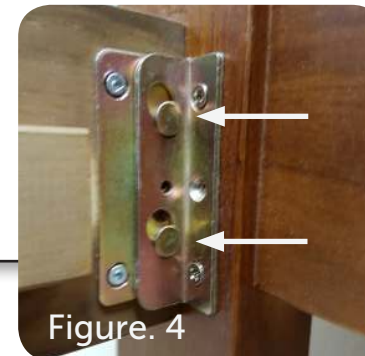

Step  
**7**

Insert Pozi drive screw through the hole on both brackets, on side rails and bed. This is your locking screw which holds the side rails firmly in place. (Figure 5)