

# Frank & McKenzie Bed Instructions

## BEFORE YOU START:

Please check you have all components -

- Headboard
- End Rails x 2
- Side Rails x 2
- Corner blocks with feet attached x 4
- Centre Rail
- Set of slats
- Pack which includes:
  - 32mm Headboard bolts x 4
  - 50mm JC Bolts x 8
  - Allen Key for JC bolts 6mm
  - Screws for holding brackets together (Pan head screws  $\frac{3}{4}$ )



# Frank & McKenzie Bed Instructions

## BEFORE YOU START:

Please check you have all components -

- Headboard
- End Rails x 2
- Side Rails x 2
- Corner blocks with feet attached x 4
- Centre Rail
- Set of slats
- Pack which includes:
  - 32mm Headboard bolts x 4
  - 50mm JC Bolts x 8
  - Allen Key for JC bolts 6mm
  - Screws for holding brackets together (Pan head screws  $\frac{3}{4}$ )



Step 1

Fit side and end rails together



Step 2

Screw through hole in brackets to hold the rails in place



Step 3

Stand bed on its side and fit the corner blocks in place using the 50mm JC bolts.




Step 4

Lay bed back down onto its feet and fit the centre rail and slats



Step 5

Fit Headboard using 32mm headboard bolts and screwing through from the back of the headboard

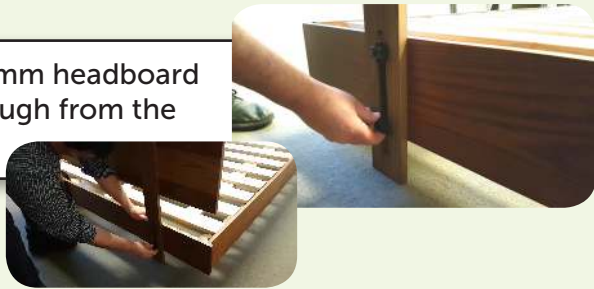

Step 1

Fit side and end rails together



Step 2

Screw through hole in brackets to hold the rails in place



Step 3

Stand bed on its side and fit the corner blocks in place using the 50mm JC bolts.



Step 4

Lay bed back down onto its feet and fit the centre rail and slats



Step 5

Fit Headboard using 32mm headboard bolts and screwing through from the back of the headboard



Your bed is now ready for use. Thanks for choosing quality New Zealand made product. Enjoy!



Your bed is now ready for use. Thanks for choosing quality New Zealand made product. Enjoy!

