

Step
6

Unwrap the slats & lay them in your frame with the joining cleats on the slats facing down.



Step
7

Fit Headboard using 32mm headboard bolts and screwing through from the back of the headboard



Your bed is now ready for use. Thank you for choosing quality New Zealand made product. Enjoy!

Coastwood
FURNITURE 



Making it EASY through superior customer service

T: 0800 369 963

E: sales@coastwoodfurniture.co.nz

www.coastwoodfurniture.co.nz

FRANK/MCKENZIE/ KARAMEA BED ASSEMBLY

INSTALL IN 7 SIMPLE STEPS!


Thank you for investing in a Coastwood slat bed.

Coastwood
FURNITURE 

BEFORE YOU START:

Please check you have all components -

- Headboard
- End Rails x 2
- Side Rails x 2
- Corner blocks with feet attached x 4
- Centre Rail (For sizes Double & larger)
- Centre Leg (For sizes King & Super King)
- Set of slats
- Pack which includes:
 - 32mm Headboard bolts x 4
 - 50mm JC Bolts x 8
 - 60mm JC Bolt x 1 (For sizes King & Super King)
 - Allen Key for JC bolts 6mm
 - Screws for holding brackets together (Pan head screws $\frac{3}{4}$)

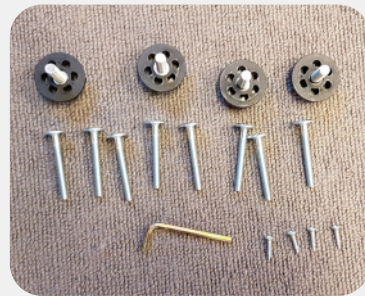

Step
1

Fit side and end rails together



Step
2

Screw through hole in brackets to hold the rails in place



Step
3

Stand bed on its side and fit the corner blocks in place using the 50mm JC bolts.



Step
4

Lay bed back down onto its feet and fit the centre rail. (Only for beds size Double & larger)



Step
5

(For sizes King & Super King)

- Place centre leg under the centre rail.
- Screw 60mm JC Bolt through the centre rail into the insert nut that is in the end of the centre leg.
- Tighten from top with the 4mm Allen Key.
- Adjust the foot so it is sitting just above the floor.
- Put slats on and complete the bed assembly.

